


## Adhesion Promoter Using Guide

Regarding the using stability of the 3M GPS bracket, it is recommended to install as the following:

1. The installation position must be clean and dry, without water mist, oil stains, dirt, etc..
2. It is recommended to use an adhesion promoter (some cam models are not equipped with it, but most auto mechanic shop have it and you can also buy it yourself). The adhesion promoter is applied to the position where the bracket is pasted, not on the 3M glue of the bracket.
3. After the 3M GPS bracket is glued, it is recommended to stand for 12 hours before hanging the dash cam, which will make the 3M glue and the bonding surface more stable (this is the suggestion from the 3M sticker manufacturer).
4. After the 3M GPS bracket is bonded, be sure to check the bonding condition on the back of the installation position, at least 90% or above (refer to the picture below).

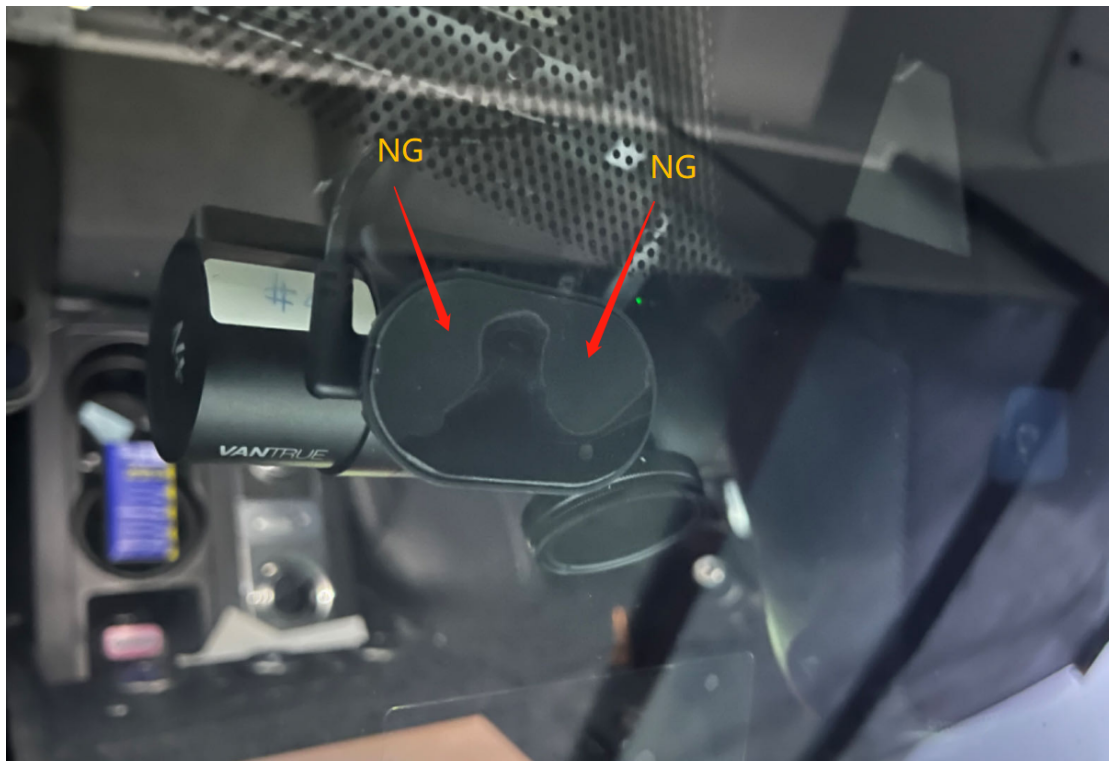



# Installation Steps




## Step 1

Choose the installation location and clean the windshield glass.



## Step 2

Take out the electrostatic sticker, tear off Tag 1, and stick it on the windshield.

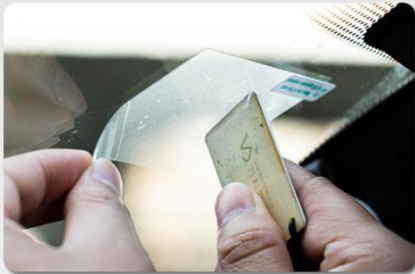

## Step 3

Squeeze out the air bubbles, keep the veneer flat, and tear off the Tag 2.



## Step 4

Take out the adhesion promoter, wipe it on the electrostatic sticker, and wait for a few seconds.



## Step 5

After the electrostatic sticker is dry, tear off the 3M glue on the bracket, stick it on the electrostatic sticker, press the base tightly, empty the air bubbles, and wait for about 12 hours.



## Step 6

After about 12 hours, connect the dash cam with the bracket. Then the installation is complete.

